
MODEL 805Y

ITEMS NOT SHOWN:
40 TESTCOCK
41 NIPPLE

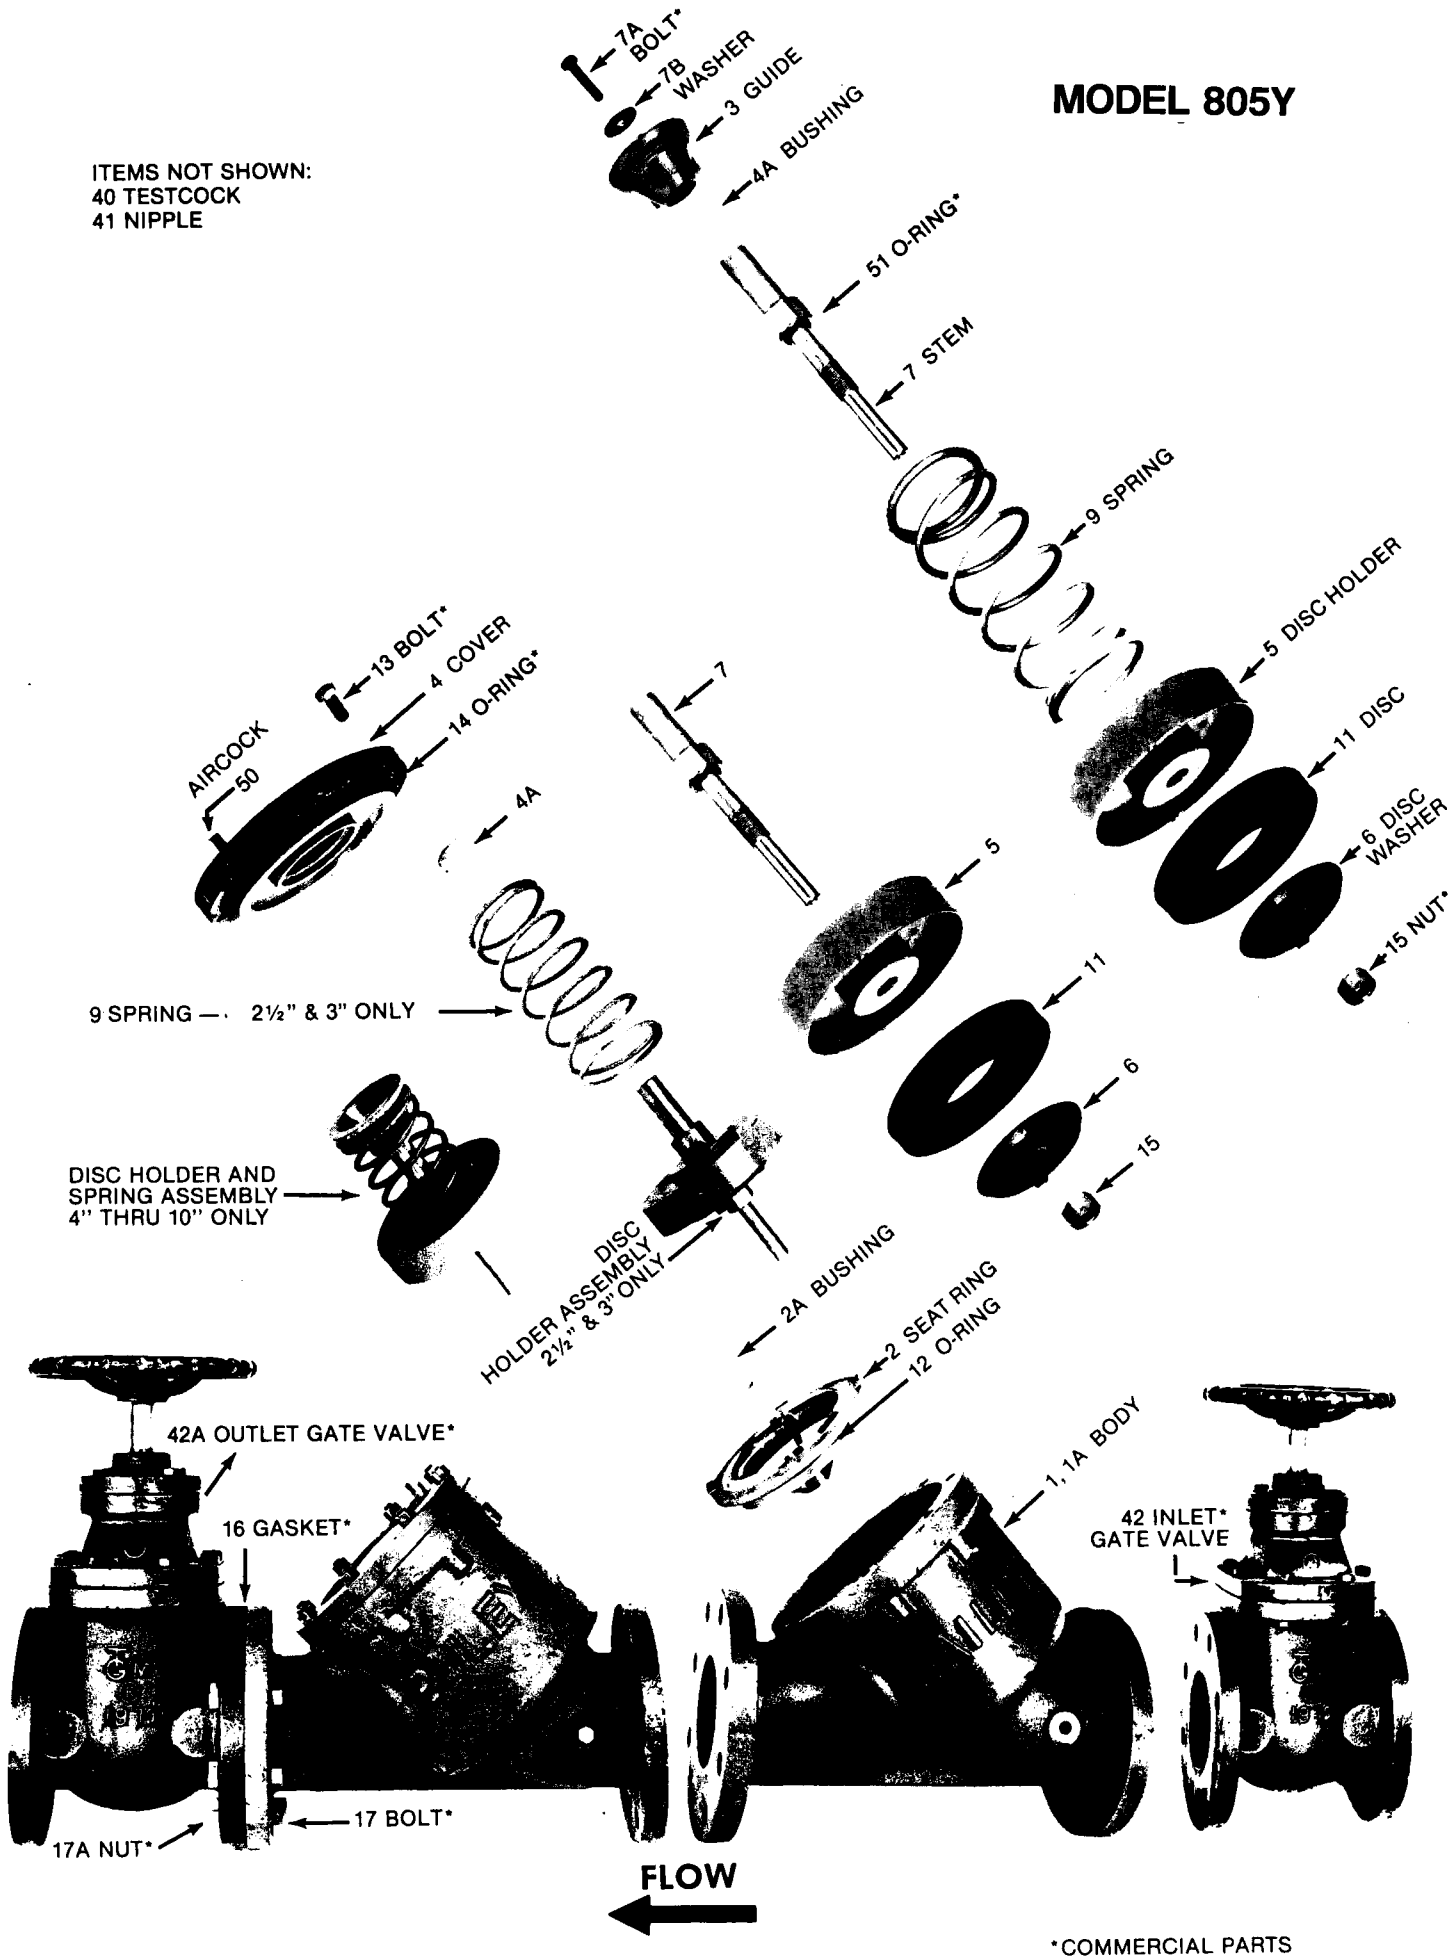

*COMMERCIAL PARTS

Model 805Y
(2 1/2"-10")

PARTS LIST


MODEL 805Y

Fig No.	Description	QTY	SIZE 2 1/2"	SIZE 3"	SIZE 4"	SIZE 6"	SIZE 8"	SIZE 10"
2	Seat Ring	2	780-273	780-274	780-275	780-276	780-277	780-278
2A	Bushing	2	780-280	780-280	780-281	780-281	780-282	780-282
3	Guide	2			190-001	190-002	190-003	190-004
4	Cover	2	780-306	780-307	780-308	780-309	780-310	780-311
4A	Bushing	2	780-312	780-312	780-313	780-313	780-313	780-313
5	Disc Holder	2	190-013	190-014	190-005	190-006	190-007	190-008
6	Disc washer	2	190-016	190-017	190-009	190-010	190-011	190-012
7	Stem	2	780-332	780-333	780-334	780-335	780-336	780-337
7A	Screw				511-515-08	511-515-08	511-515-08	511-515-08
7B	Washer	2			780-338	780-338	780-338	780-338
9	Spring		780-341	780-342	780-343	780-344	780-345	780-346
11	Seat Disc	2	780-357	780-358	780-359	780-360	780-361	780-362
12	O-Ring	2	399-238-72	399-246-72	399-254-72	399-264-72	399-273-72	740-095
13	Capscrew	16	511-516-08	511-516-08	511-517-10	511-519-12	511-520-12	
13	Capscrew	24						511-520-14
14	O-Ring	2	398-244-72	392-252-72	398-263-72	398-272-72	398-451-72	740-102
15	Locknut	2	521-547-00	521-547-00	521-550-00	521-550-00	521-551-00	521-551-00
16	Gasket	3	780-365	780-366	780-367	780-368	780-369	780-370
17	Bolt	12	511-019-18	511-019-20				
17	Bolt	24			511-019-22	511-020-26	511-020-28	
17	Bolt	26						511-021-30
17A	Nut	12	521-019-00	521-019-00				
17A	Nut	24			511-019-00	521-020-00	521-020-00	
17A	Nut	36						511-021-00
40	Ball Valve	4	781-047	781-047	781-047	781-048	781-048	781-048
41	Nipple*	4	571-181-44	571-181-44	571-181-44	571-181-55	571-181-55	571-181-55
	Gate Valves							
42	Resilient Seated NRS		781-005	781-006	781-007	781-008	781-009	787-010
42	Resilient Seated OS&Y		780-891	780-893	780-895	780-897	780-899	780-901
50	Aircock	2	780-416	780-416	780-416	780-416	780-416	780-416
51	O-Ring	2	399-014-72	399-014-72	399-116-72	399-116-72	399-118-72	399-118-72
	Assemblies/Kits							
	Spring Assembly		905-086	905-088	902-467	902-469	902-471	902-473
	(3, 4A, 5, 6, 7A, 7B, 9,							
	11, 15, and 51)							
	Rubber Parts		905-059	905-060	905-061	905-062	905-063	905-064
	(11 and 14)							
	Seat Kit		902-386	902-385	902-384	902-383	902-382	902-381
	(2, 2A, 2B, and 12)							
	Lg. Mounting Kit		905-036	905-037	905-038	905-039	905-040	905-041
	(16,17,17A; Both Ends)							
	Cover Assembly		902-497	902-498	902-499	902-500	902-501	902-502
	(4, 4A, 14)							

*Not Shown

Spring Removal Tool

Dimensions (Inches)					
Valve Size	A	B	C	D	E
4"	9 1/2	4 1/4	5/8	1/2 - 13	5 1/2
6"	12 1/2	5 5/8	3/4	5/8 - 11	5 1/2
8"	14 1/4	6 3/8	7/8	3/4 - 10	7
10"	16 1/2	7 1/2	7/8	3/4 - 10	7

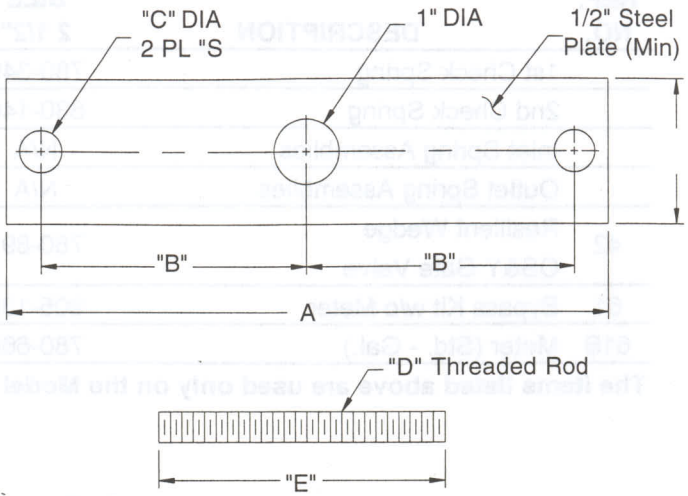

NOTE: This information is provided to expedite servicing of FEBCO products. One tool may be fabricated for use on all required sizes by drilling all holes at appropriate dimensions in a single steel plate of maximum required length.

To order a FEBCO spring removal tool order part number 905-121

CAUTION: To avoid possible injury during use, do not fabricate tool from lesser strength material or to smaller dimensions than the minimums shown.

Seat Ring Tool

For Model 825 Only.

Dimensions (Inches)					
Valve Size	A	B	C	D	E
1 1/2"	1 1/2	6	3/8	3/4	3/4
2"	1 1/2	6	3/8	3/4	3/4
2 1/2"	2 1/2	8	1/2	1	1
3"	3	8	1/2	1	1
4"	4	9	1/2	1	1
6"	6	10	5/8	1	1
8"	8	12	5/8	1	1
10"	8	12	5/8	1	1

NOTE: This information is provided to expedite servicing of FEBCO products.

